


Bunkatank/Septant Installation

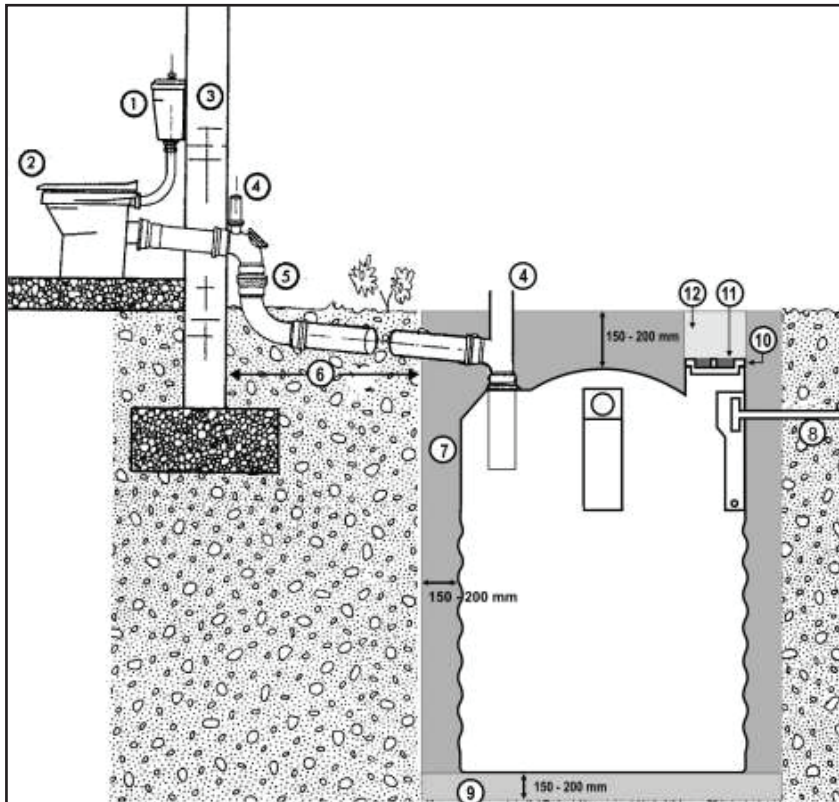


Key

1. Cistern
2. Toilet Pedestal with lid
3. Toilet wall
4. Vent outlet
5. Pipe connection to septic tank
6. Keep adequate distance between the tank and the foundation of the house
7. Dug out pit backfilled with sand or sand-crete (10% cement 90% sand)
8. Outlet to soak pit
9. Compacted sand base without any stones or sharp objects
10. Manhole lid
11. Lid cavity to be filled with concrete
12. No concrete or soilcrete should be placed above manhole use normal soil

Note

1. Do not direct water from shower or bathroom sinks to the septic tank. Direct these into the soak pit
2. Do not use excessive detergents, disinfectants or bleach as they kill useful bacteria that decompose waste
3. Locate tank away from driveway to prevent collapse of tank
4. For rapid decomposition, use EM or similar agents and follow manufacturers user instructions
5. Always fill tank with water to just below outlet before use and backfilling dugout pit

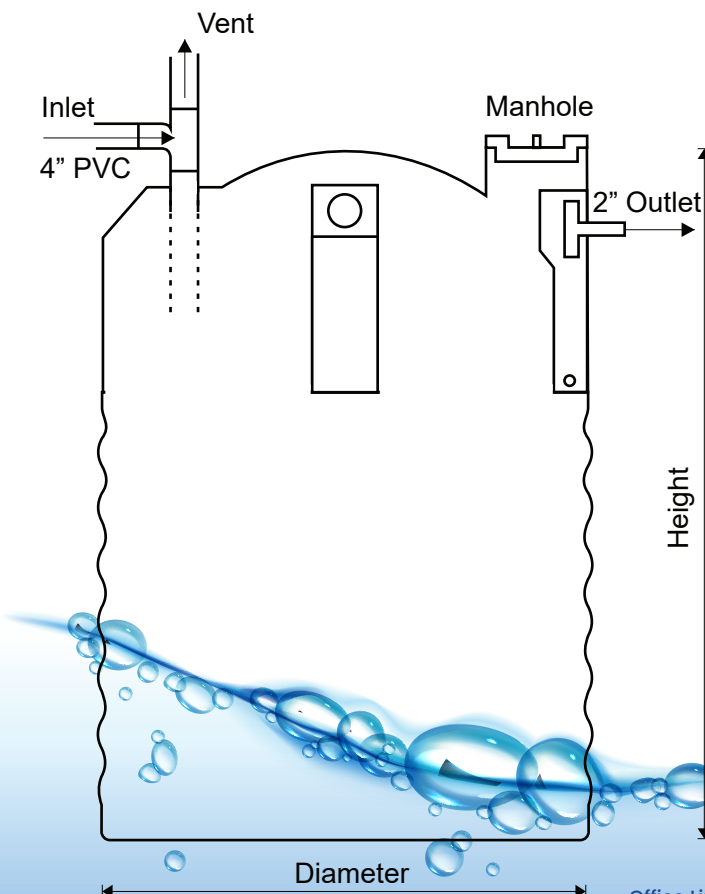

Office Line: +254 730 832 000 / +254 722 206 378

Tel: +254 202 519 098 / 099

Nairobi Gate Industrial Park, 10902/19

Northland Area, Eastern Bypass

P.O Box 42168-00100, Nairobi, Kenya,

info@kentainers.co.ke www.kentainers.co.ke